
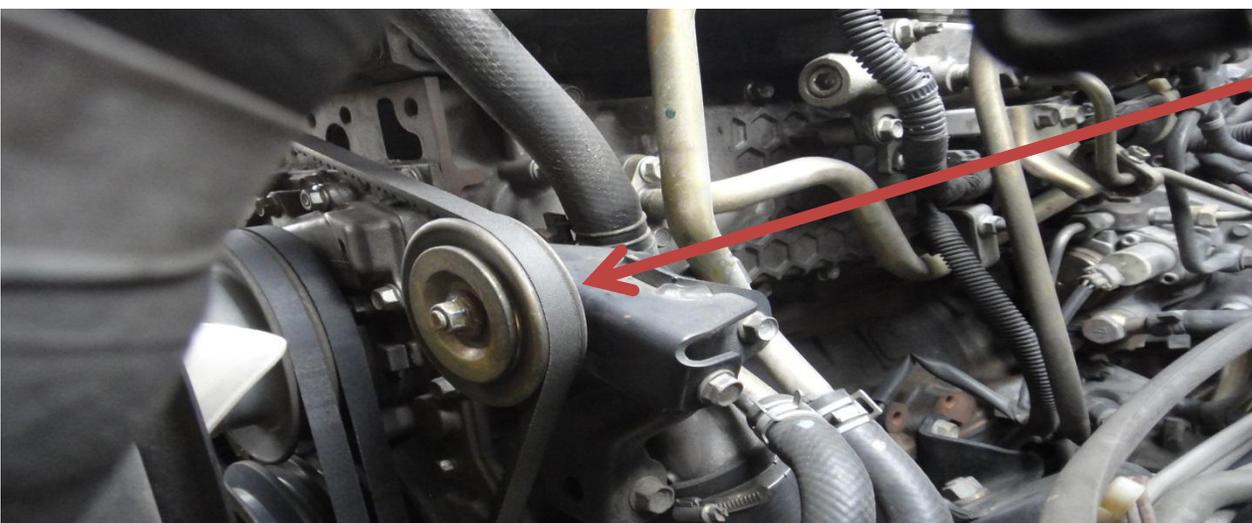


How to adjust A/C belt


Tools required

1. Work gloves
2. Socket wrench or breaker bar
3. 14mm & 12mm socket


1. locate A/C pulley

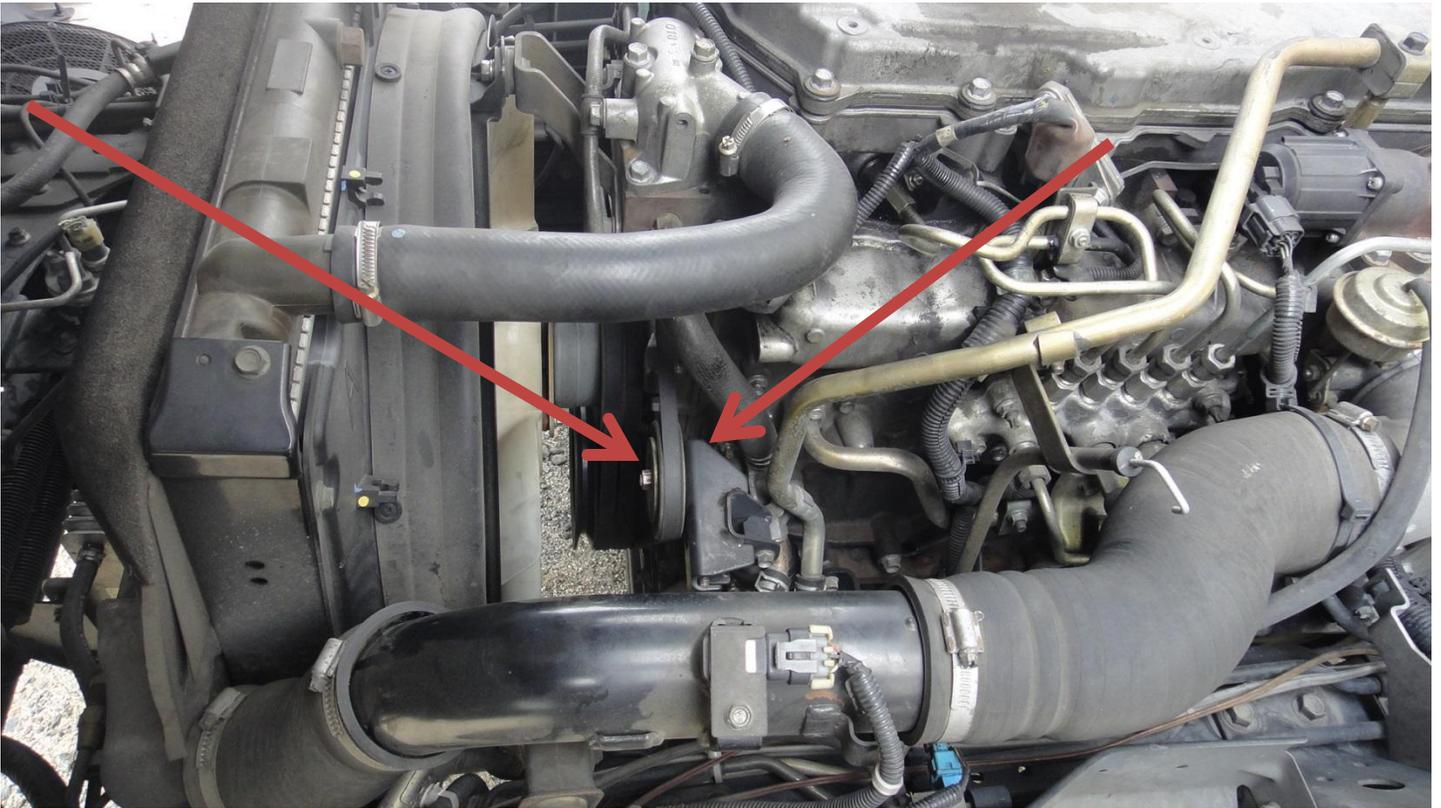

2. Used a 14mm socket to loosen nut **BUT DO NOT REMOVE**

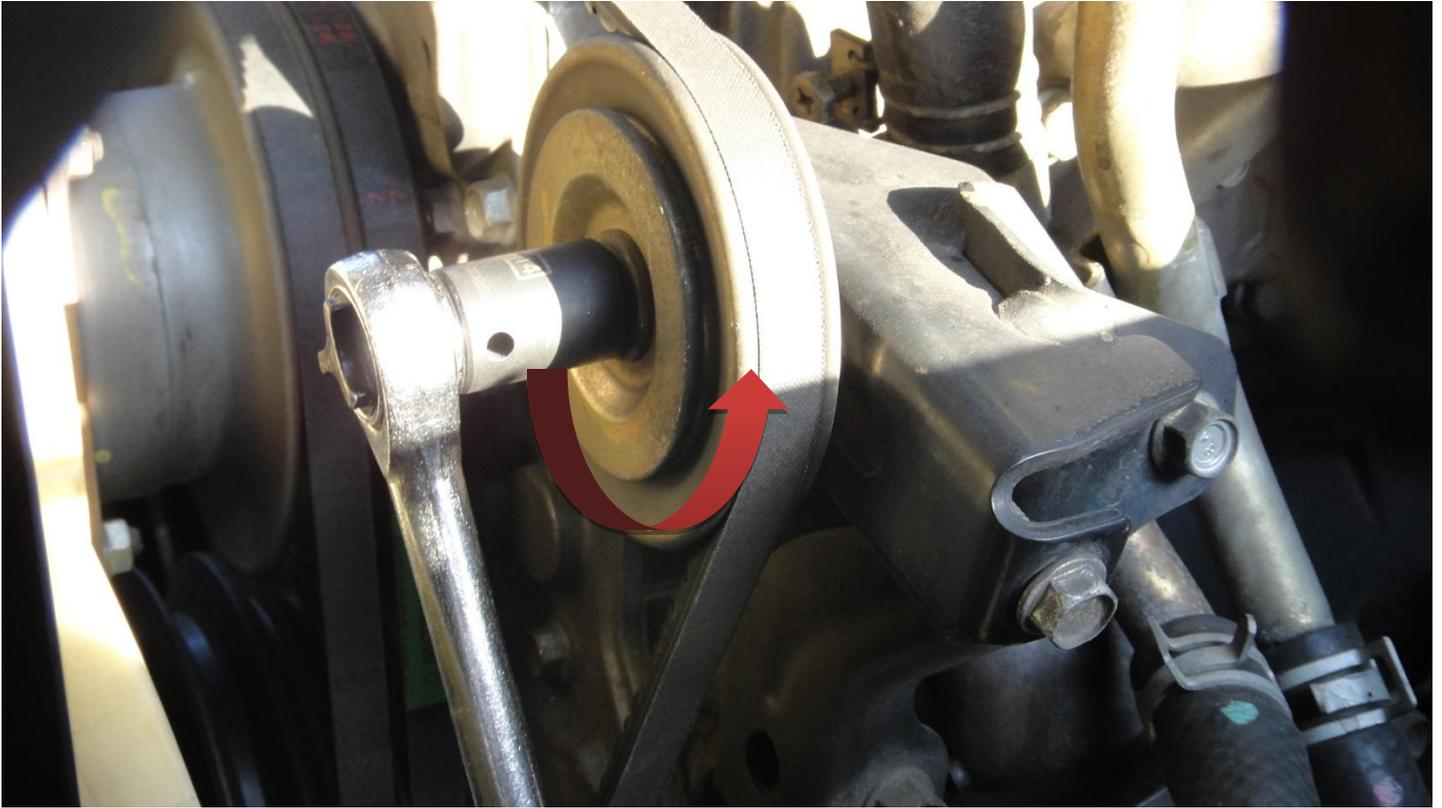


3. Use a 12mm socket. Turn the socket in increments of $\frac{1}{2}$ turn to the right

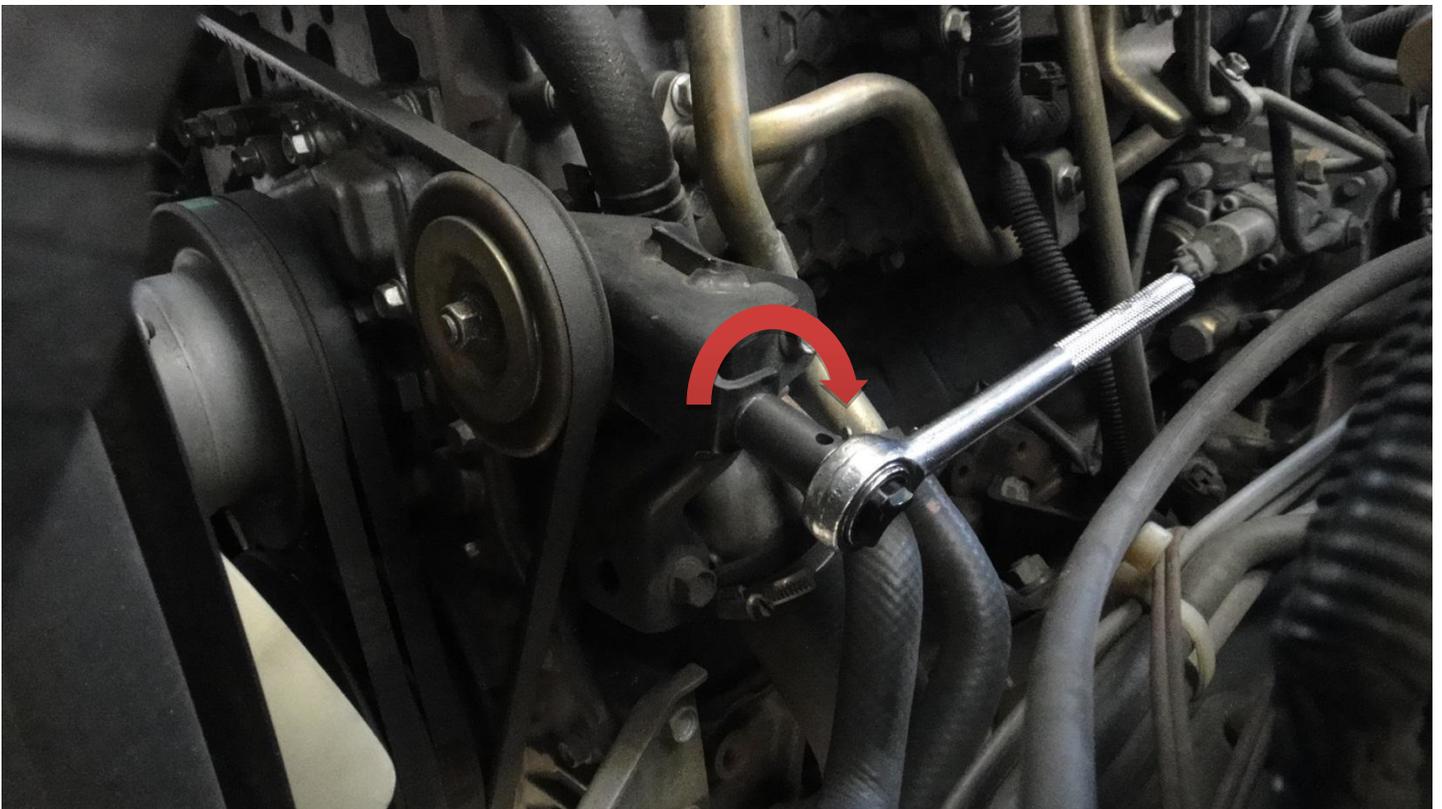

Check the tension adjust if necessary but don't over do it

4. Tighten the nut

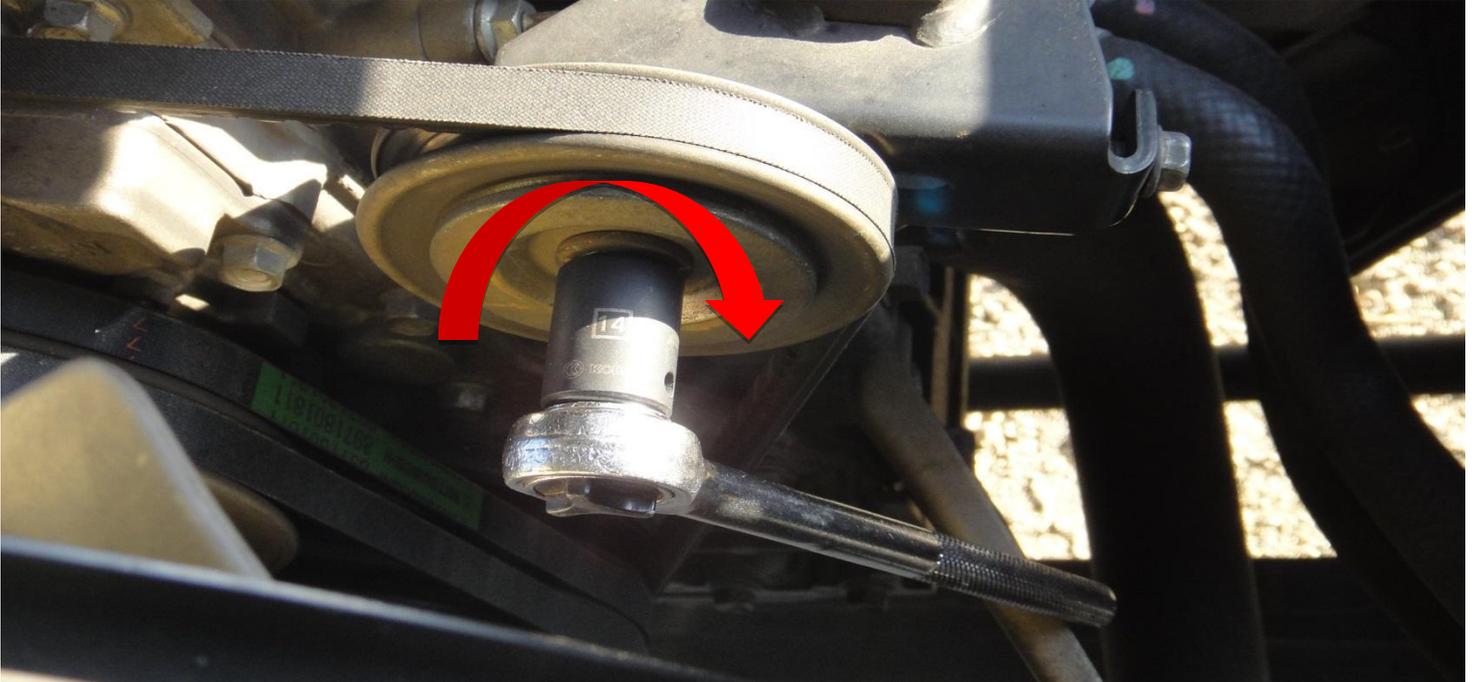

5. Start the engine and test your A/C. If squealing continue repeat steps.